

The Trim Kit is designed for installation of Unique Home Designs Metal and Hampton and Newport Vinyl Hinged Screen Doors between door trim in wider openings. The cellular PVC door stop will be fastened to the hinge side trim where the screen door will be installed to provide a narrower opening.

Contents:


2 Pieces, 1" x 3/4" x 44" cellular PVC door stop
8 #15 x 1-1/2" galvanized steel finish nails

Tools Required:

Safety Glasses Hammer
Pencil Hand Saw

Important: Read all instructions completely before beginning installation.

- Following the installation instructions included with the screen door or the installation video available at www.helpmeinstallit.com, determine the side of the opening where you will attach the screen door hinges (the hinge side).

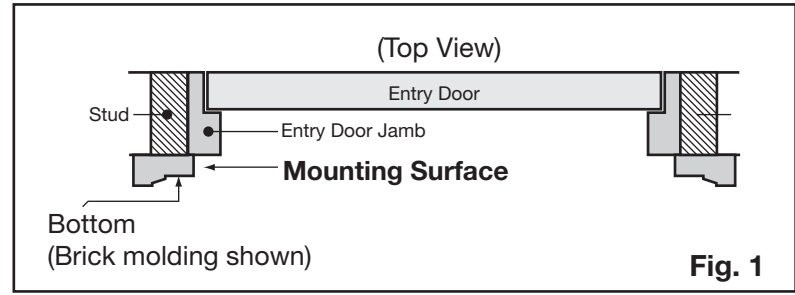

- Locate the mounting surface on your door trim (Fig. 1) on the side you identified in step 1.

- Place 1 piece of the cellular PVC door stop provided against the mounting surface with the bottom edge of the door stop even with the bottom edge of the door trim. The 1" wide face of the door stop is placed against the trim and the 3/4" surface should be parallel with the inside (toward the entry door) edge of the trim along the entire length of the door stop (Fig. 2).




- Fasten the door stop to the mounting surface using 4 of the finish nails provided (Fig. 2).

- Place the top of the second piece of the cellular PVC door stop flush with the top of the mounting surface and mark where the bottom of the door stop hits the top of the door stop already installed (Fig. 3).

- Using a hand saw, carefully cut the excess material from the door stop as marked in step 5.

- Fasten the trimmed door stop to the upper section of the mounting surface using 4 of the finish nails provided (Fig. 4).

- Refer to the installation instructions included with the screen door or the installation video available at www.helpmeinstallit.com to install your screen door, using the door stop as your mounting surface for the screen door hinges.

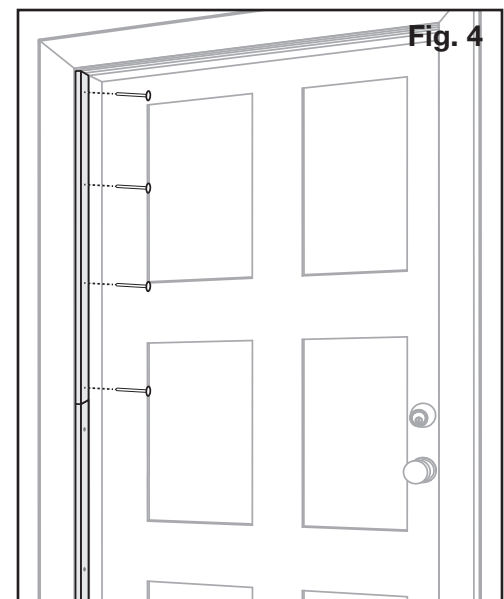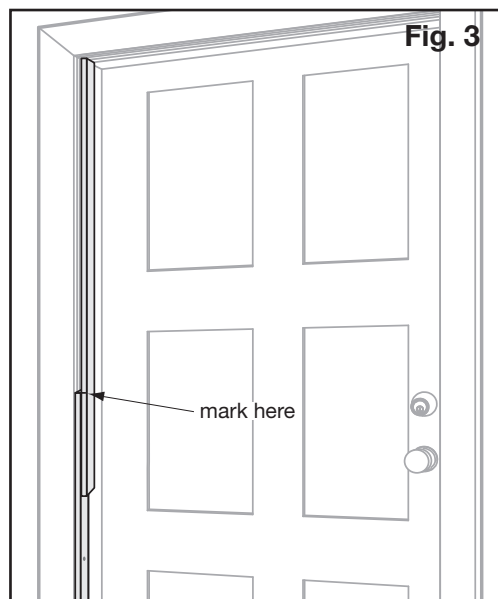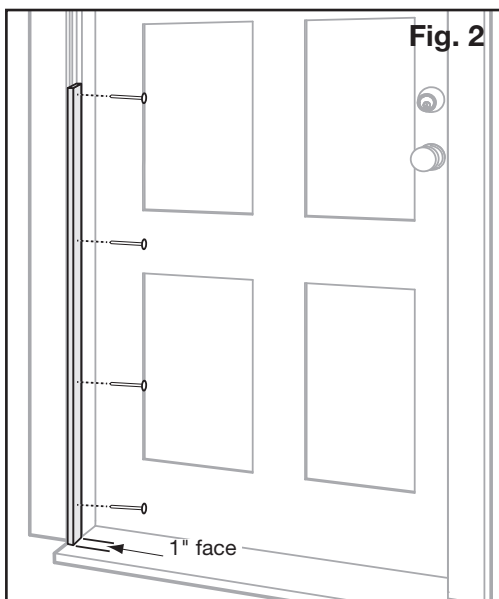

El Recorta Juego es diseñado para la instalación de Casa Extraordinaria Diseño Metal y Hampton y Vinilo de Newport Dependió Puertas mosquitera entre puerta recortan en aperturas más anchas. El tope de puerta de PVC celular se sujetará en el marco del lado de la bisagra donde se instalará la puerta para que quede una abertura más estrecha.

Contenido:

2 piezas de tope de puerta de PVC celular, de 1" x 3/4" x 44"
8 clavos para acabado núm. 15 x 1-1/2", de acero galvanizado


Herramientas Necesarias:

Gafas de seguridad Nivel
Lápiz Serrucho

Importante: Lee completamente todas las instrucciones antes de comenzar la instalación.

- 1 Siguiendo las instrucciones de instalación incluidas con la puerta con pantalla o el video de instalación disponible en www.helpmeinstallit.com, determina el lado de la abertura donde instalarás las bisagras para la puerta con pantalla (el lado de la bisagra).

- 2 Ubica la superficie de montaje en tu marco de puerta (Fig. 1) en el lado que identificaste en el paso 1.

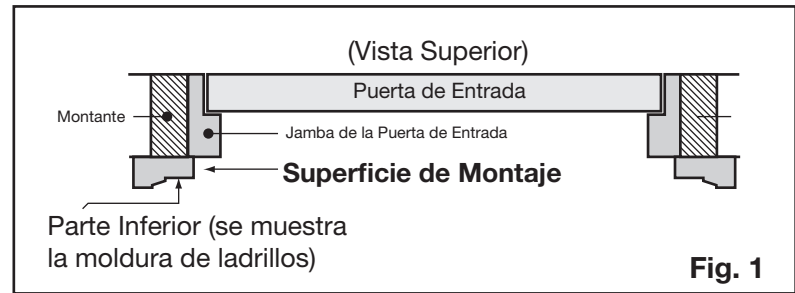

- 3 Coloca 1 pieza del tope de puerta de PVC celular incluida contra la superficie de montaje, con el borde inferior del tope de puerta parejo con el borde inferior del marco de la puerta. El lado ancho de 1" del tope de puerta debe colocarse contra el marco y la superficie de 3/4" debe estar paralela con el borde interior (hacia la puerta de entrada) del marco, a lo largo del tope de puerta (Fig. 2).

- 4 Sujeta el tope de puerta a la superficie de montaje usando 4 de los clavos para acabado incluidos (Fig. 2).

- 5 Coloca la parte superior de la segunda pieza del tope de puerta de PVC celular incluida contra la superficie de montaje y marca el lugar donde la base del tope de puerta coincide con el tope de puerta ya instalado (Fig. 3)

- 6 Usando un serrucho, corta con cuidado el material sobrante del tope de puerta según se marcó en el paso 5.

- 7 Sujeta el tope de puerta cortado a la sección superior de la superficie de montaje usando 4 de los clavos para acabado incluidos (Fig. 4).

- 8 Consulta las instrucciones de instalación incluidas con la puerta con pantalla o el video de instalación disponible en www.helpmeinstallit.com, para instalar la puerta con pantalla, usando el tope de puerta como la superficie de montaje para las bisagras de la puerta con pantalla.

