


# Patented One-way Screws

For use with Unique Home Designs® Security Screen Doors and Window Guards

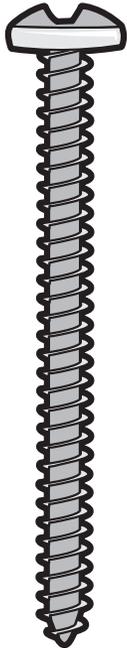


- Patented design and specialty tool required makes them difficult to remove.

1. Mark pilot hole.
2. Pre-drill hole using a 1/4" drill bit.
3. Using a drill install the One-way screw through the door frame into the pilot hole. Do NOT over tighten.
4. If necessary, use touch-up paint to cover any scratches.



**One-way Driver**  
Included with security doors.

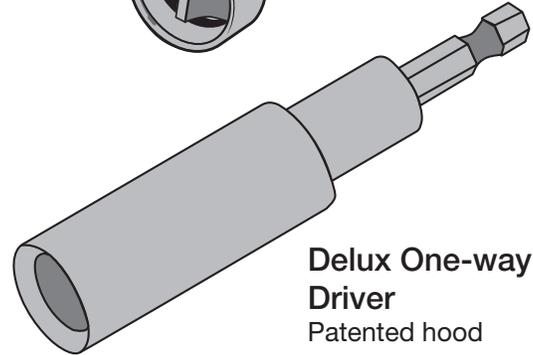

**Delux One-way Driver**  
Patented hood secures screw head while driving screws.  
Sold separately.