

**Surface Mount**

**2- PANEL ULTIMATE SECURITY PATIO SCREEN DOOR**

**PRODUCT MEASURING GUIDE**

**1 Getting Started**




**Inspect Your Entryway for Obstructions:** Check for any obstructions above and around your entryway that may prevent the operation of your new security door, and/or its installation, such as: light fixtures, door bell, low overhang, door handle of your existing door, and trees, bushes, or hanging plants.

This guide contains procedures and instructions for proper measurement before installing a security screen door. If a circumstance comes up that is not covered in this guide, please contact us for help at:



**Unique Home Designs**  
973 N. Colorado Street, Gilbert AZ. 85233  
or  
VIEW INSTALLATION VIDEOS  
AND LATEST INFORMATION AT  
 [helpmeinstallit.com](http://helpmeinstallit.com)

**2 Identify or Create Required Mounting Surface**

Your new security patio door will require a flat minimum mounting surface of 2-1/8" above, on both sides and below your entry door. In some cases this may require a build out. If a build out is required, install bottom of build out first (**Fig. 1**), making sure it is flush with stoop to avoid creating a tripping hazard. Secure all sides of the build out to studs in the wall.

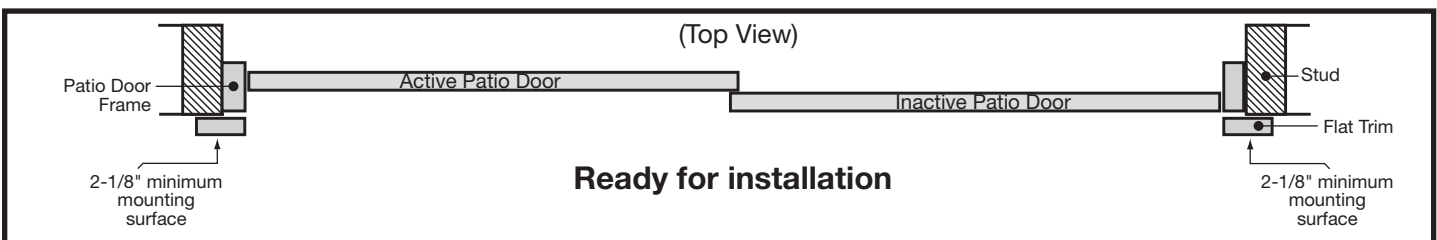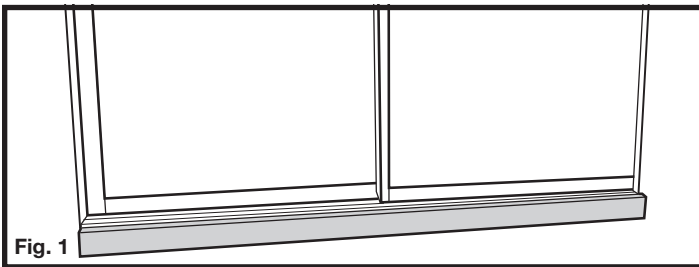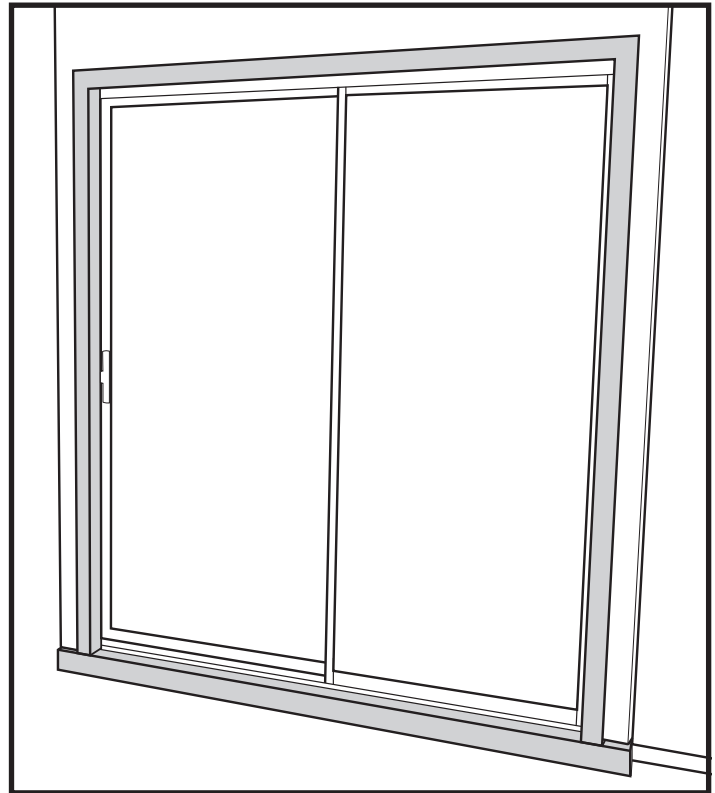

### 3 Measure for Rough Opening Height and Width

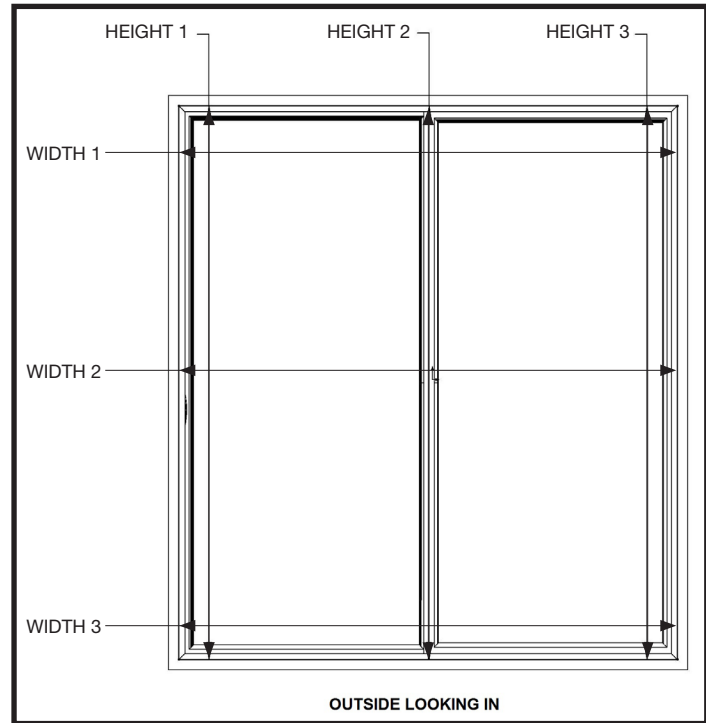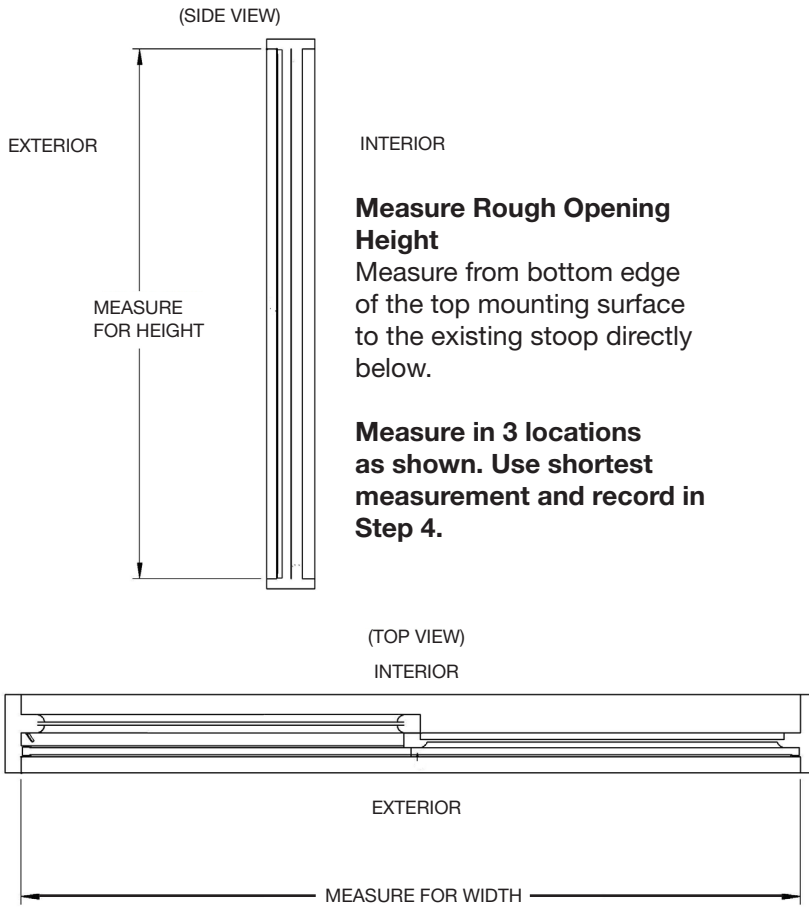

#### Measure Rough Opening Width

Measure from the inside edge of the mounting surface to the opposite inside edge of the mounting surface for rough opening width.

**Measure in 3 locations as shown. Use shortest measurement and record in Step 4.**

### 4 Determine if STANDARD SIZE will fit

Determine which fit range your measurements fall within and order that standard size door.

Door Size	Standard Size Rough Opening Width Fit Range	Rough Opening Width	Overall Width	Standard Size Rough Opening Height Fit Range	Rough Opening Height	Overall Height
72" x 80"	70-1/4" - 73"		75"	79-3/4" - 82-1/2"		84.5"
96" x 80"	94-1/4" - 97"		99"			

**Note:** If custom size needed, to get overall frame dimensions, add 4-3/4" to width and height.

### 5 Determine handle side for CUSTOM SIZE

From the outside looking in specify right or left side handle of active panel.

Handle Side	Right	Left
-------------	-------	------