


# VERTICAL WINDOW GUARD INSTALLATION INSTRUCTIONS

**IMPORTANT:** Read all instructions before beginning installation

**Tools Required:**

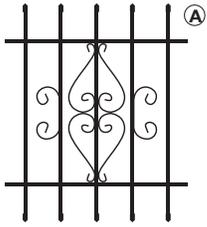


A) Vertical window guard  
B) 4" one-way screws




Tape measure  
Level  
Pencil  
Safety glasses  
Drill and 3/16" drill bit  
One-way driver (sold separately)

## 1 Measure opening

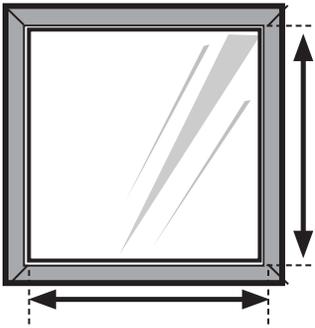

## 2 Determine mounting method (brackets sold separately)

### INSIDE MOUNT

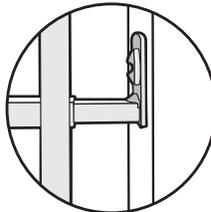

Inside-mount  
Bracket

### SURFACE MOUNT



Flush-mount  
Bracket




3" Projection  
Bracket

## 3 Install 2 brackets

Top bracket tab should face up.

Pre-drill

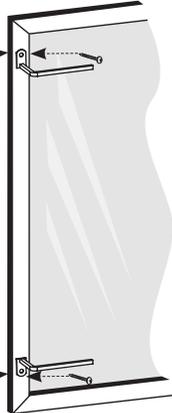


Center brackets on 2" x 4" stud.

Bottom bracket tab should face down.

Pre-drill

**NOTE:** For inside mount window guard bracket tabs should face away from the window.

## 4 Attach window guard

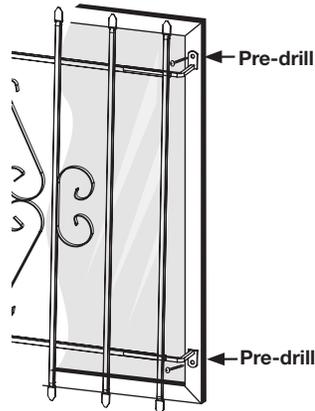

Insert remaining two brackets into window guard and attach to window frame.