


VERTICAL WINDOW GUARD INSTALLATION INSTRUCTIONS

IMPORTANT: Read all instructions before beginning installation

Tools Required:

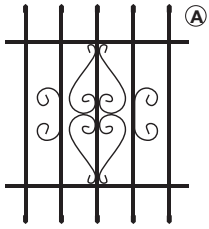


A) Vertical window guard
B) 3" or 4" one-way screws




Tape measure
Level
Pencil
Safety glasses
Drill and 3/16" drill bit
One-way driver (sold separately)

1 Measure opening

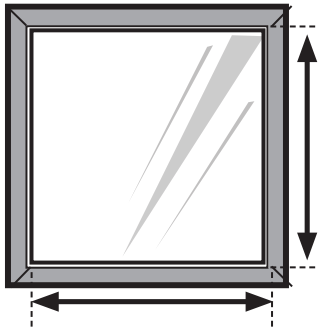


2 Determine mounting method (brackets sold separately)

INSIDE MOUNT

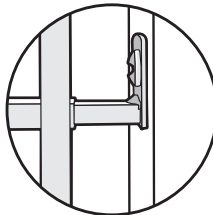

Inside-mount
Bracket

SURFACE MOUNT

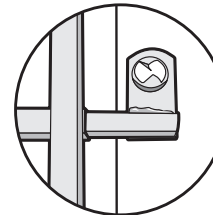

Flush-mount
Bracket



3" Projection
Bracket

3 Install 2 brackets

Top bracket tab should face up.

Pre-drill




Center brackets on 2" x 4" stud.

Bottom bracket tab should face down.

Pre-drill

NOTE: For inside mount window guard bracket tabs should face away from the window.

4 Attach window guard

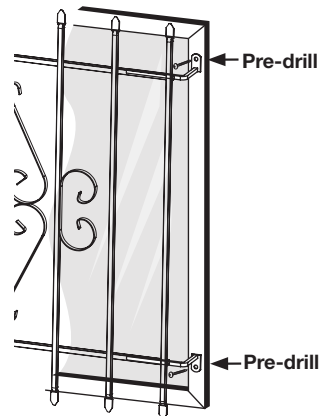

Insert remaining two brackets into window guard and attach to window frame.